

QUICK GUIDE TO THE POWER UNIT

MODES

Modes are all selected from the Keyfob. The current mode is remembered when the Power Unit is switched off.

Fire ●●●○○○○○

Up & Down control level, **Adjust** controls feel and **Fire** button gives the final ZAP.

Flo ○●●○○○○●

A continuous output. **Up & Down** control level and **Adjust** controls feel. **Fire** gives a hidden boost.

Pulse ●●●○○○○○

Pulsing output. **Up & Down** control level, **Adjust** controls rate of cycle and **Fire** gives a steady output.

Train ○○●○○○○●

Training mode needs no training. **Down** is 25% output, **Adjust** 50% **Up** 75% and **Fire** hits out at 100%.

Output Socket
RX Activity LED
Power switch



Tease ●○○●○○○○

A pleasure mode designed to tease. **Up & Down** control level, **Adjust** controls rate of cycle and **Fire** gives a boost.

Torment ○○○●○○○○

Similar to Tease but with a reversing cycle, created more to torment. **Up & Down** control level, **Adjust** controls rate of cycle and **Fire** gives a boost.

Audio L & H ○○○○○●○○

Audio sensitive modes. Use sound to zap. **Up & Down** control level, **Adjust** controls sensitivity, Low and High Audio modes offer differing response levels. Press **Fire** to override.

Motion L & H ○○○○○○●○

Move and get zapped its that simple. **Up & Down** control level, **Fire** to zap. **Adjust** to change response. Low and High Motion modes control overall sensitivity.

FITTING THE BATTERY

Make sure the power box is off. Turn the box over and using your thumb, press down on the ridged area and slide the cover towards the bottom.

1



Unclip the battery clip and replace with a fresh 9V Alkaline PP3.

Place the battery into the battery compartment making sure that the battery connector is to the left-hand side and the battery cable runs along the bottom of the battery compartment.

2



Replace the battery cover by sliding it back on until it clicks into place.

3



QUICK GUIDE TO THE KEYFOB

To Change Level

Buttons **+** and **-** control the level in most modes. Level is shown on the indicator strip as a series of lights. Each light shows one of 4 levels, the longer the strip of lights the higher the level.



Level 1 :: slow flash

Level 2 :: medium flash

Level 3 :: fast flash

Level 4 :: solid

Press and hold **+** or **-** to step up or down faster.

To Start

- Fit Battery into Power Unit.
- Switch Power Unit on.
- Pair Keyfob if needed.
- Wait for self test and battery level to show.
- Connect Electrodes, choose a mode and have fun.



To Select a Mode

Press **-** and **G** together to enter mode select.
Press **+** or **-** to cycle through modes, then press **G** to select mode.



TX indicator

Flickers whenever a button on the Keyfob is pressed.

To Pair the Keyfob

Unclip the battery compartment door, remove the battery from the compartment leaving it connected. You can now access the pair button.



Switch the Power Unit on, and then press the pair button. The RX led will light up on the Power Unit.

Press any button on the Keyfob, then press again and the RX led should now flash a few times. When it stops your Keyfob is paired.

To Clear Pairings

To clear all pairings, press and hold the pair button for 10 seconds.

Factory Reset

Press and Hold **-** when switching the Power Unit on to clear all stored settings.

Warning DO NOT use if you have a heart condition, suffer from epilepsy or are pregnant. DO NOT use above the waist.

E-STIM SYSTEMS

Full Manual at <https://e-stim.info/remote>